

Installation of Global Floor Bunding


Please Note : The Global Floor Bunding is not compliant for flammable liquids.

Preparation

1. Apply floor cleaner to all floor surfaces to which Bund is to be installed. Floor surface must be clean, dry and free of oil or grease.
2. Using a visible marker, draw a straight line along the edge of the proposed line of bund.

Bund Installation

1. Using Lock Set E (two pak epoxy paste available from Parchem 08 9356 2533) or similar product put down required amount following pastes instructions.
2. Place the Polybund Ramps in the correct position and check for straightness. Use a rubber mallet to adjust the selected system.
When the adhesive is nearly set, drill and install the Dynabolts or similar product through the preformed holes in the bund System.
NB: - DO NOT OVERTIGHTEN
3. Once the adhesive is fully set loosen the fixing bolts off half a turn

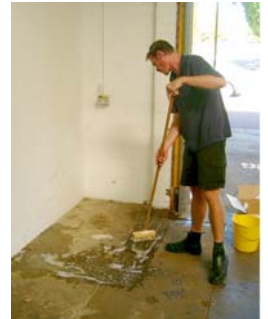

Cleaning the floor

NB: - You must select and use adhesive and bolts, which will not react with possible chemical spillage

